






Not included / Non incluso / Non Inclus / Nie zawarty/ No incluido / Nao incluido





1

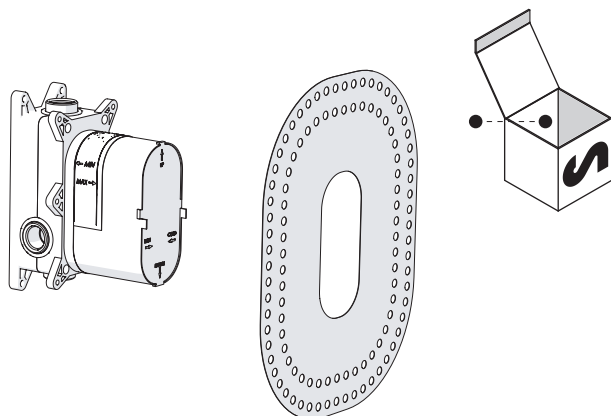

RIFERIMENTO ALLA PIASTRELLA
REFERENCE TO THE TILE

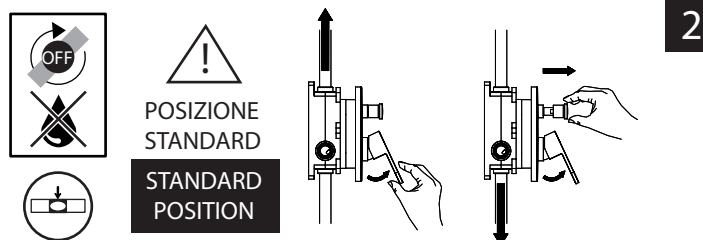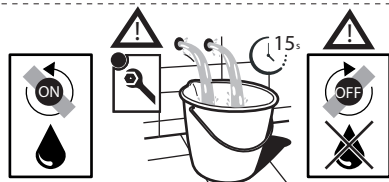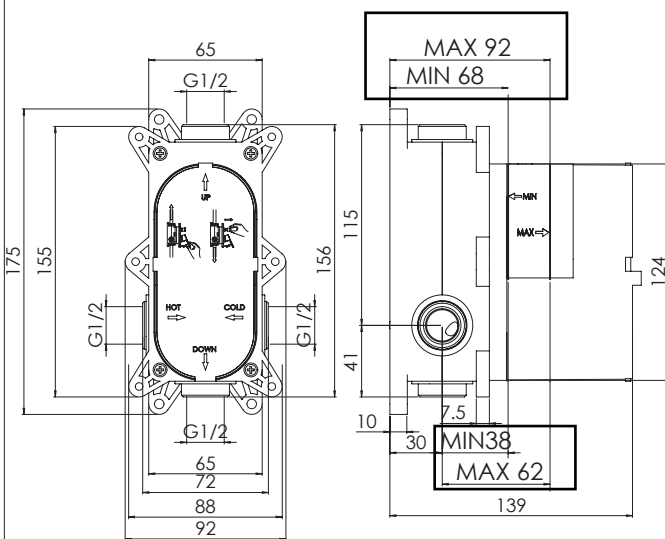

2

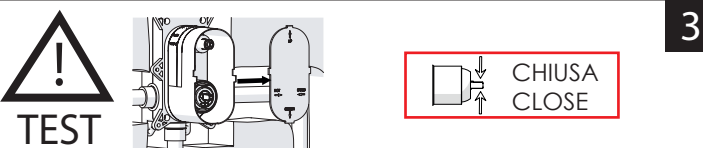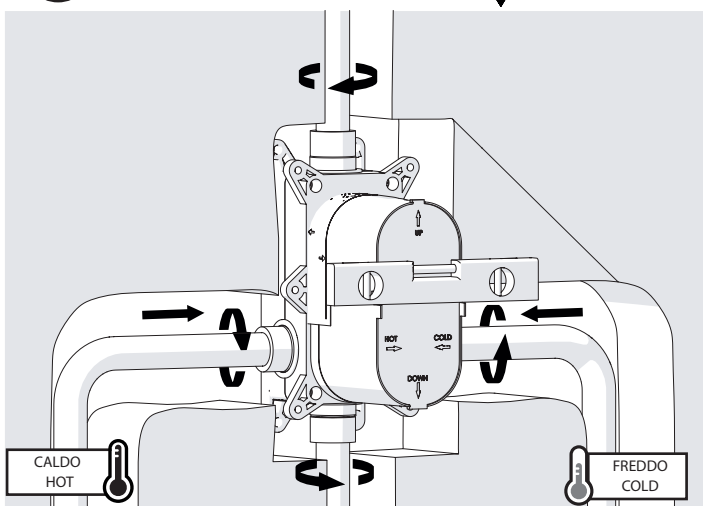

3

TEST PER I TUBI PRIMA DELLA CARTUCCIA (A)
TEST FOR THE PIPES BEFORE CARTRIDGE (A)


ATTENZIONE !
Durante il test la cartuccia deve essere in posizione "chiusa"!
ATTENTION!
During test cartridge must be placed in "CLOSED POSITION"





TEST PER I TUBI DOPO LA CARTUCCIA (B)
TEST FOR THE PIPES AFTER CARTRIDGE (B)

ATTENZIONE !
Secondo la norma europea EN817, in caso di test per i tubi DOPO la cartuccia, la pressione deve essere a 4 bar per 1 minuto e la cartuccia in posizione "aperta"


ATTENTION!
As per european rule EN817, in case of test for the pipes after cartridge, the pressure must be within 4 bar for 1 minute, and the cartridge in "open position"



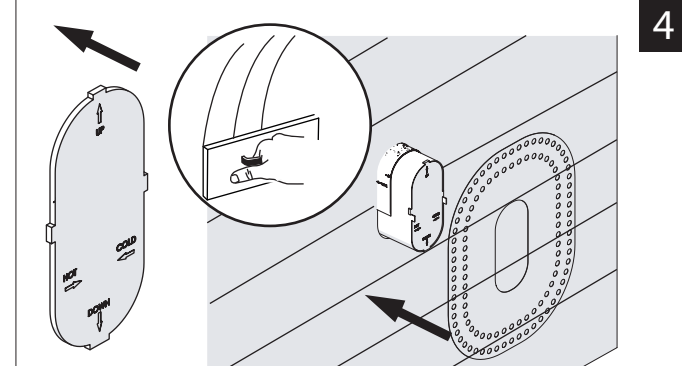


4

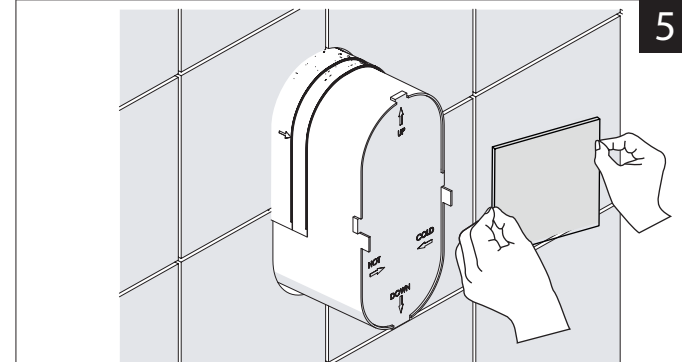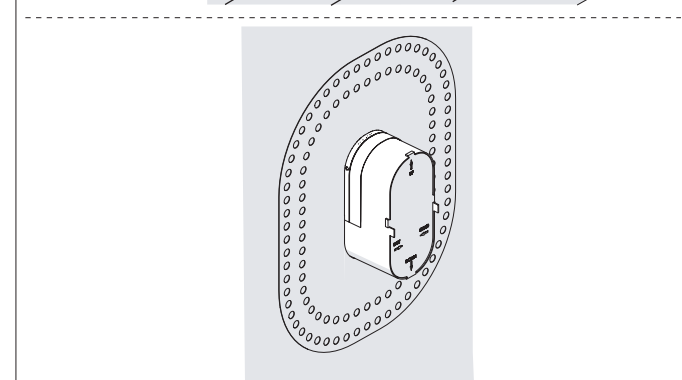

5





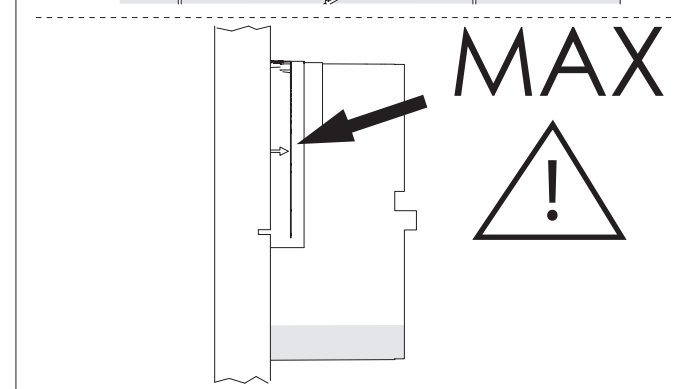


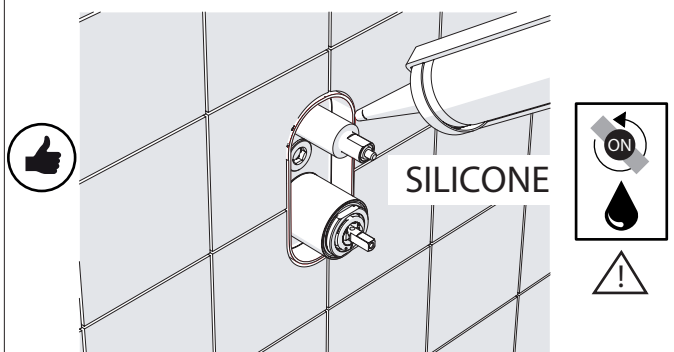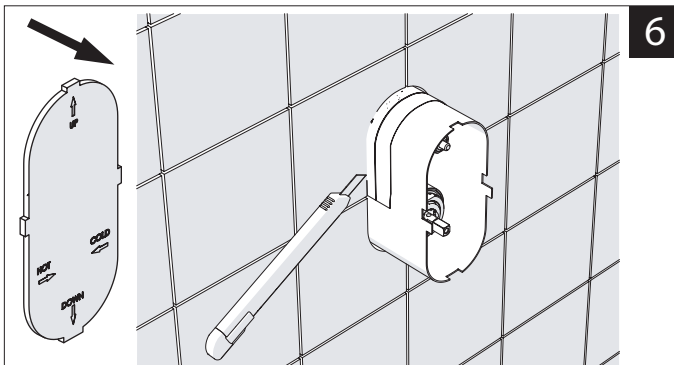

Valvola di non ritorno
Non-return valve

SOLO per set di riempimento e di troppopieno vasca
ONLY for bath filling and overflow sets

CHiusa CLOSE

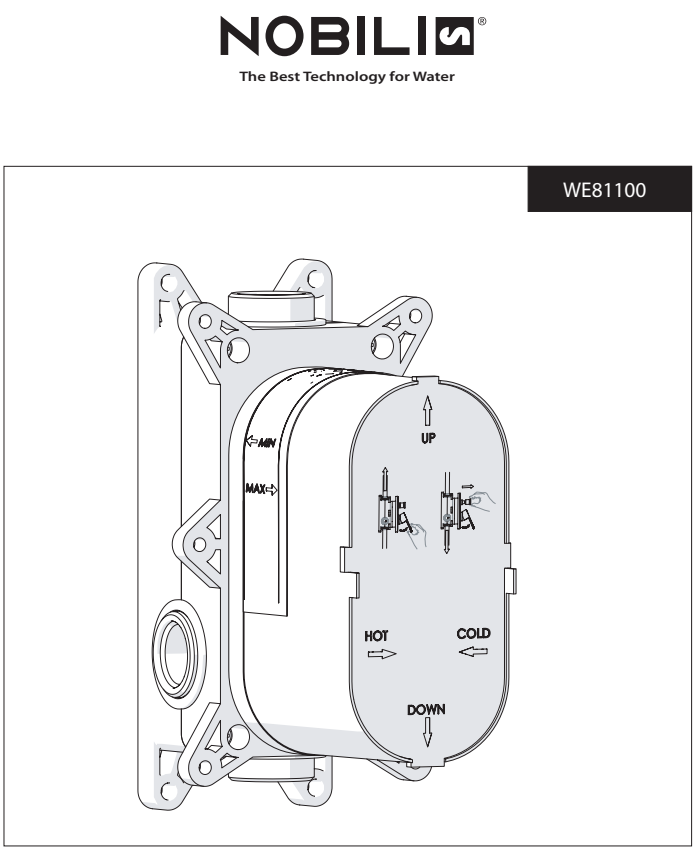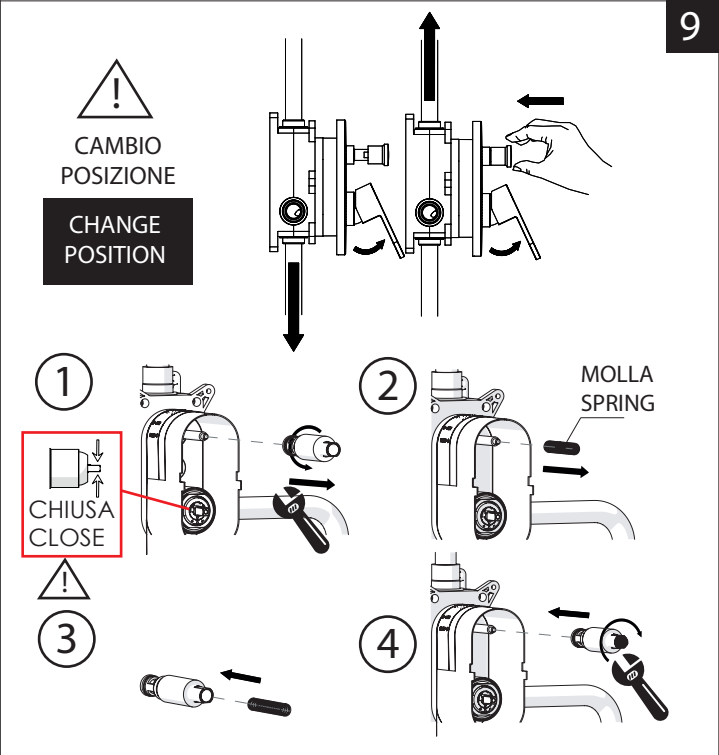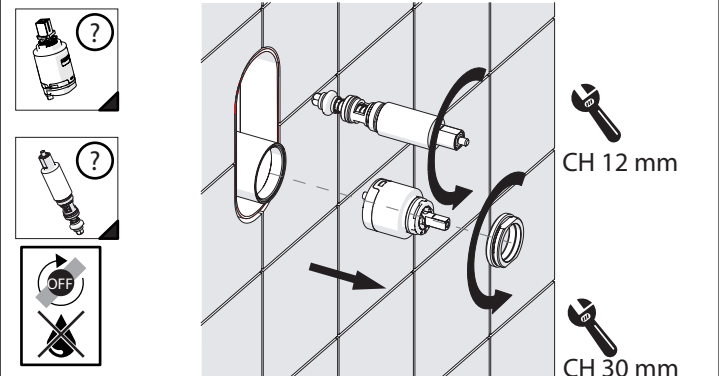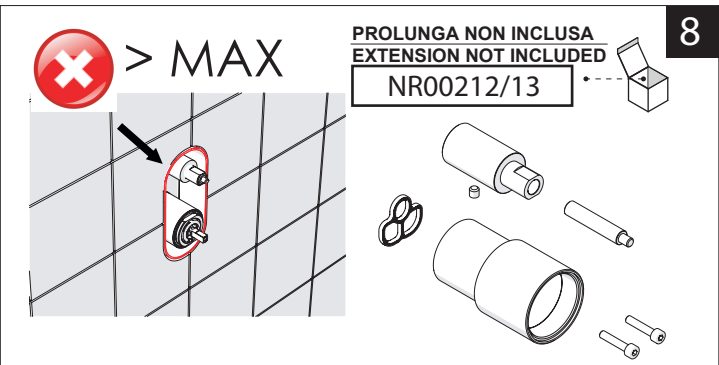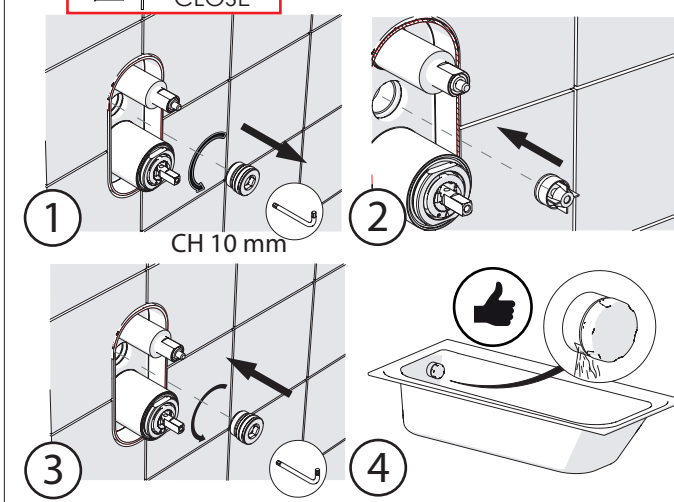

PRIMA DI INIZIARE / BEFORE STARTING									
	P	bar		MAX 10	5		T	MAX 80	
	0,5	MIN		1			∞	C	65 45

PULIZIA / CLEANING				
ACQUA WATER	ALCOOL	MICROFIBRA MICROFIBER	SPUGNA SPONGE	DETERGENTI DETERGENT
✓	✓	✓	✗	✗